



DQM
NEOSoft

WATS LabVIEW add-On installation instructions



NEOSoft
Technologies

WATS LabVIEW add-On installation instructions

Version 1.0



DQM/NEOSoft

WATS LabVIEW add-On installation instructions



NEOSoft Technologies

Neosoft Technologies Inc.
4800 rue de Rouen, suite 230
Montréal, QC H1V 3T4

Toll-free: 1-866-636-7381
Tel : (418) 948-8324
Fax : (418) 948-8325

<https://www.neosoft.ca/en/home/>

HISTORY

Version	Date	Author	Modification
1.0	11/02/2026	V. Carpentier	Document creation



DQM H
NEOSoft

WATS LabVIEW add-On installation instructions



NEOSoft
Technologies

Table of Content

1	Purpose of This Document.....	4
2	WATS LabVIEW Add-on Installation steps.....	4



DQMH
NEOSOFT

WATS LabVIEW add-On installation instructions




NEOSOFT
Technologies

1 Purpose of This Document

The purpose of this document is to provide the steps required to install WATS LabVIEW Add-On library in order to use the DQMH WATS Module.

2 WATS LabVIEW Add-on Installation steps

- I. You first need to install the WATS client on your PC. Download and install the latest version of the client at <https://download.wats.com>.
- II. Once installed, you might have to reboot your PC to start the WATS Client service in the background.
- III. From the Windows Menu, start the "WATS Client Configurator"



- IV. Log into your account or create one:

The screenshot shows the WATS Client Setup window. The title bar reads "WATS Client" with standard window controls. On the left, there is a sidebar with "Setup" and "Proxy Settings". The main area is titled "Setup" and contains the following fields and instructions:

- Computer name:** LAPTOP-TDUUKTIB. Below the field, it says: "Computer name is the Windows name, it is used as station name in reports by default, unless it is overwritten in the report. The name must be edited in Windows."
- Location:** (empty field)
- Purpose:** (empty field). Below the field, it says: "Location and Purpose is used to identify the station and are displayed in reports and dashboards. To edit the values, go to your WATS web application > Control Panel > System Manager"
- Account / Server:** (empty field). Below the field, it says: "The same address as your WATS web application (e.g. virinco.wats.com)"
- Username:** (empty field)
- Password:** (empty field)

At the bottom of the form are two buttons: "Connect" and "New customer". At the very bottom of the window are three buttons: "Apply", "Ok", and "Cancel". The footer of the window reads "WATS.com | 7.0.178".




DQMH
NEOSOFT

WATS LabVIEW add-On installation instructions



NEOSOFT
Technologies

- V. You need to have logged at least once online (*yourdomain.wats.com*) in order to accept the Terms and Conditions of WATS before connecting a new WATS Client.
- VI. Once you are logged in, you can select the "NI LabVIEW add-on" on the left side of the menu, and then select to install the LabVIEW add-on

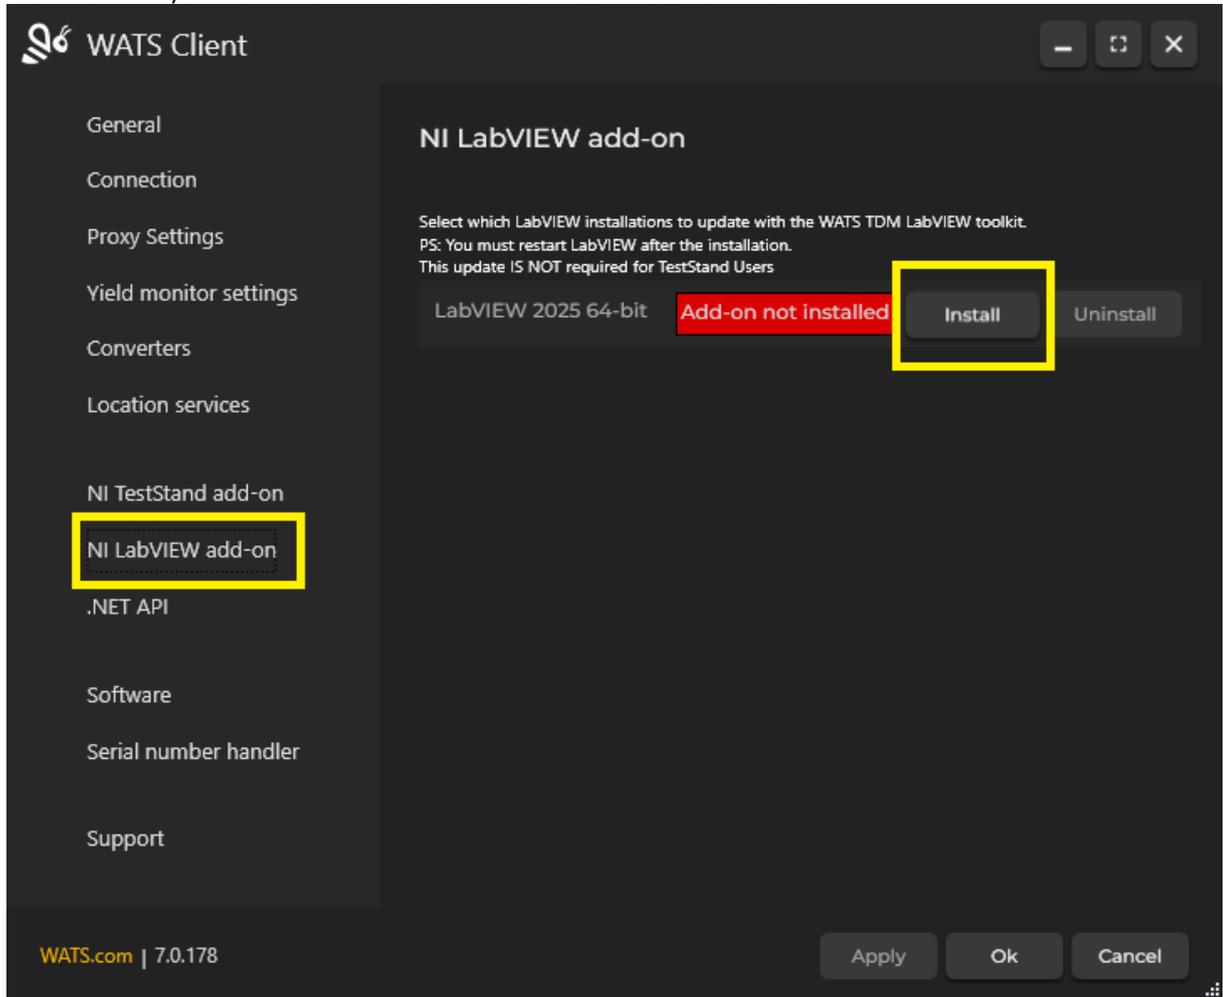

- VII. You should now be able to use the "DQMH WATS Module". If a new version of the WATS LabVIEW Add-on module was installed, you will get a warning message when using the "DQMH WATS Module" that will say that it found a new version of the .NET assembly.